


HERO 300 SUPER BEAM

80W LED BEAM MOVING HEAD

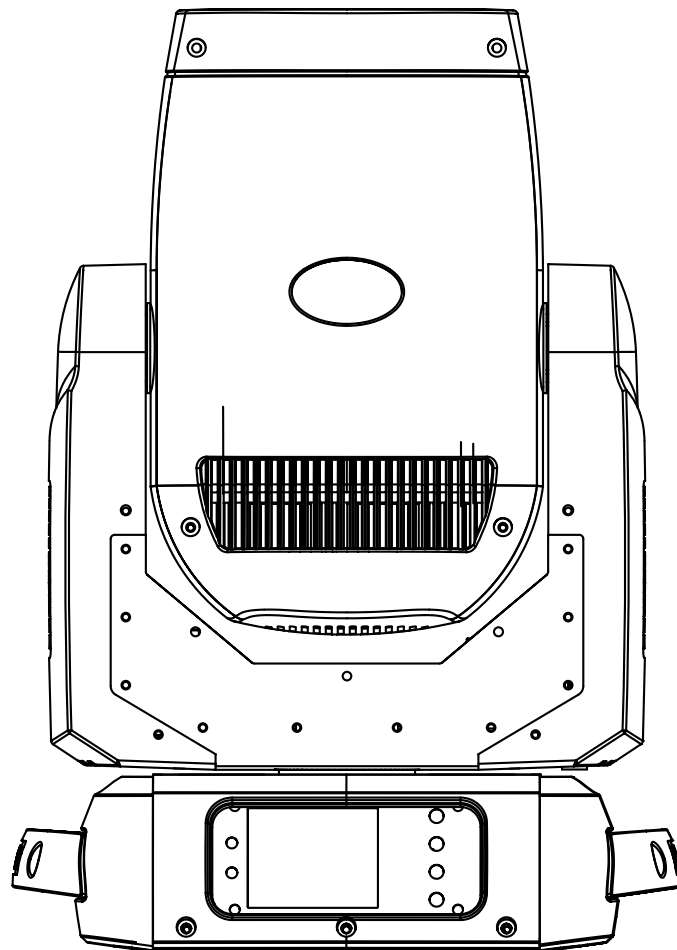

USER MANUAL



Table of contents

Caution!	3
Introduction	3
Safety instructions	3
Fixture overview	4
Installation	4
Read 'Safety information' before installing the fixture	4
Fastening the fixture to a flat surface	4
Mounting the fixture on a truss	4
Securing with a safety cable.....	5
DMX-512 connection/connection between fixtures	5
Operation	6
Addressing	6
Universal DMX Control.....	6
Auto run mode	6
Sound Mode	6
Master-Slave Operation.....	6
Control Menu Map	7
DMX Protocol	7
Fixture Cleaning	9
Fuse Replacement	9
Troubleshooting	10
The fixture does not work, no light	10
No response to the sound.....	10
Specifications	10

Caution!



Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



Avoid looking directly into the light source!

Wear protective glasses and other PPE (personal protective equipment) when working on or near the fixture.



Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label. Make sure it is grounded when using it!

Unplug mains lead before opening the housing!

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the powercord from time to time.

Make sure to replace the fuse with another of the same type and rating.



For your own safety, please read this user manual carefully before you initial start-up.

Follow operating safety precautions and pay attention to warning signs methods and equipment on the user manual.



Warning! This symbol indicates a hot surface. Certain parts of the housing can become hot during operation. After use, wait for a cool-down period of at least 10 minutes before handling or transporting the device.



Indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. IP 20 rating.

The ambient temperature must always be between -5° C and +45° C.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

Introduction

Thank you for having chosen Hero 300 Super Beam. You will see you acquired a powerful and versatile device.

Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.


Safety instructions

This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow the guidelines in this manual. The manufacturer of this device will not accept responsibility for damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual.

This device has left our premises in absolutely perfect condition. Always disconnect from the mains, when the device is not in use or before cleaning it. Keep away children and amateurs from the device! There are no serviceable parts inside the device. Maintenance and service operations are only to be

carried out by authorized dealers.

Fixture overview

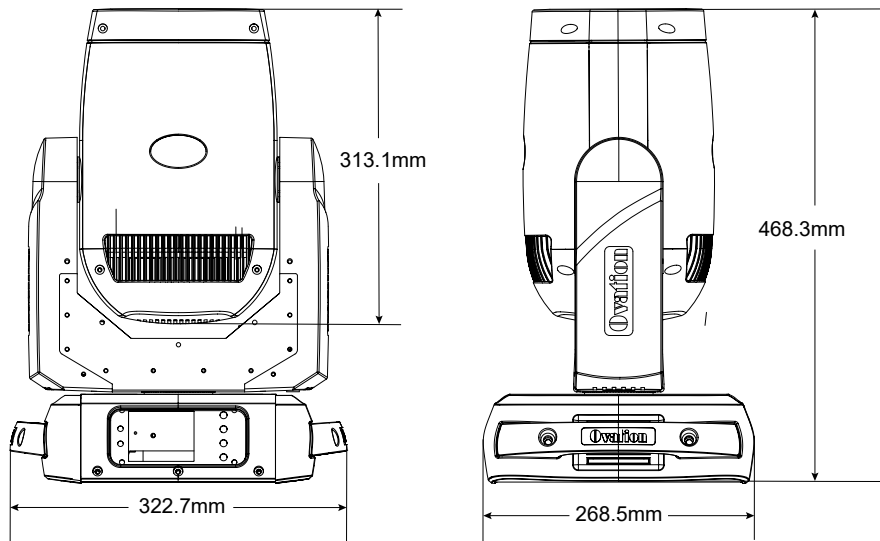

Installation

Read 'Safety information' before installing the fixture

The fixture is designed for indoor use only and must be used in a dry location with adequate ventilation. Ensure that none of the fixture's ventilation slots are blocked.

Fasten the fixture to a secure structure or surface. Do not stand it on a surface or leave it where it can be moved or fall over. If you install the fixture in a location where it may cause injury or damage if it falls, secure it as directed in this user manual using a securely anchored safety cable that will hold the fixture if the primary fastening method fails.

Fastening the fixture to a flat surface

The fixture can be fastened to a hard, fixed, flat surface that is oriented at any angle. Ensure that the surface and all fasteners used can support at least 10 times the weight of all fixtures and equipment to be installed on it.

Fasten the fixture securely. Do not stand it on a surface or leave it where it can be moved or fall over. If you install the fixture in a location where it may cause injury or damage if it falls, secure it as directed below with a securely anchored safety cable that will hold the fixture if the primary fastening method fails.

Mounting the fixture on a truss

The fixture can be clamped to a truss or similar rigging structure in any orientation. When installing the fixture hanging vertically down, you can use an open-type clamp such as a G-clamp. When installing in any other orientation, you must use a half-coupler clamp that completely encircles the truss chord.

To clamp the fixture to a truss:

1. Check that the rigging structure can support at least 10 times the weight of all fixtures and equipment to be installed on it.
2. Block access under the work area.
3. Fold the legs of the mounting bracket together and bolt a rigging clamp securely to the mounting bracket. The bolt used must be M12. It must pass through both mounting bracket legs and be fastened with a self-locking nut.
4. Working from a stable platform, hang the fixture with its clamp on the truss and fasten the clamp securely.

5. Secure the fixture with a safety cable as directed below.


Securing with a safety cable

Secure the fixture with a safety cable (or other secondary attachment) that is approved for the weight of the fixture so that the safety cable will hold the fixture if a primary attachment fails.

Loop the safety cable through the eyebolt in the back of the fixture and around a secure anchoring point. Do not loop the safety cable around the fixture's mounting bracket only, as this will leave the fixture unsecured if it separates from the bracket.

DMX-512 connection/connection between fixtures

Occupation of the XLR-connection:

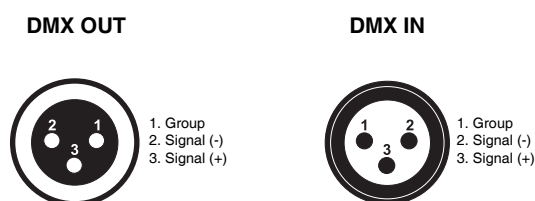

If you are using controllers with this occupation, you can connect the DMX-output of the controller directly with the DMX-input of the first fixture in the DMX-chain. If you wish to connect DMX-controllers with other XLR-outputs, you need to use adapter-cables.

Building a serial DMX-chain:

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

DMX-512 connection with DMX terminator:

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 resistor between Signal (-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

Connection with the mains:

The Hero 300 Super Beam is equipped with auto-switching power supply that automatically adjusts to any 50-60Hz AC power source from 100-240 Volts.


This fixture must be earthed. To use the fixture, a plug must be fixed.

The correct assembly of a sufficient plug may be done by professional persons only.

Connect the device to the mains with the enclosed power supply cable.

The occupation of the connection cables as below:

Cable color	Connection	International
Brown	Live	L
Blue	Neutral	N

Yellow/green	Earth(Ground)	
--------------	---------------	---

Operation

The Hero 300 Super Beam can operate in three different modes. In each mode you can run the fixture as a stand alone fixture or in a master/slave configuration. This next section will detail the differences in the operating modes.

Addressing

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to listen to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or make different address for each fixture individually.

If you set the same address, all the units will start to listen to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to listen to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected fixture.

In the case of the Hero 300 Super Beam, which is 16 channels fixture. If you set, for example, the address in the 16 channel mode to channel 17, the device will use the channel 17 to 32 for control.

Universal DMX Control

This function allows you to use a universal DMX-512 controller to control the chases and patterns, dimmer and strobe. A DMX controller allows you to create unique programs tailored to your individual needs.

Auto run mode

In this mode, you can run internal program without a controller.

1. Press the MENU button until **"RUN"** is displayed, and press ENTER.
2. Press the UP or DOWN button so that **"Run mode"** is displayed.
3. Press the UP or DOWN button to select **"Auto run"**.
4. The unit will now run auto mode without a DMX controller.

Sound Mode

This mode allows either single unit or several units linked together, to run to the beat of the music.

1. Press the MENU button until **"RUN"** is displayed, and press ENTER.
2. Press the UP or DOWN button so that **"Sound ctrl"** is displayed.
3. The unit will now run to the beat of the music.

Master-Slave Operation

This function will allow you to link up to 16 units together and operate without a controller. In a Master-Slave set up one unit will act as the controlling unit and the others will react to the controlling units programs. Any unit can act as a Master or as a Slave.

1. Using approved DMX data cables, daisy chain your units together via the XLR connector on the rear

of the units.

2. For the Master unit press the **Sys set-Run mode-AUTO** icon in in the touch screen.
3. For the slave units press the **DMX address** icon in the touch screen. Set the DMX address to 001.
4. The slave units will now follow the Master unit.

Control Menu Map

Default settings=**bold** print

Main Menu	Level 1	Level 2	Function
Addr	001-497		DMX address setting
Run	DMX ctrl	√	Control model
	Auto run		
	Sound ctrl		
	M/S choose	on/off	Master-slave
	Light switch	on/off	No function
Test	Pan	0-255	Test mode
	Tilt	0-255	
	Focus	0-255	
	Color	0-255	
	Gobo	0-255	
	Prism	0-255	
	Frost	0-255	
	Strobe	0-255	
Info	Work mode	DMX nor	Current working mode
		Auto nor	
		Sound nor	
	Address	xxx	Current DMX address
	Version		Software version
	Elapse		Fixture running hour
	Total		Total running hour
Adva	Pan Invert	on/off	Pan reverse
	Tilt Invert	on/off	Tilt reverse
	P/T rectify	on/off	Pan/Tilt opticalcoupler calibration
	Pan offset	0-150	Pan offset(default-10)
	Tilt offset	0-150	Tilt offset(default-10)
	Factory setting	Sure/on	Reset setting to factory default
	Data hold	on/off	Hold last value if no signal
	Reset fixture	Sure/no	Fixture reset
Disp	Language	English	Language
	Screen saver	Off	Display always on
		Model 1	Display blackout
		Model 2	Show DMX address only
		Model 3	Show icons and working mode
Screen rotation	on/off	Screen reverse 180°	

DMX Protocol

16 CHANNEL	DMX value	Function
CH1		Pan
	000-255	0-540°
CH2		Pan fine
	000-255	Fine control of pan movement

CH3		Tilt
	000-255	Tilt movement by 270°
CH4		Tilt fine
	000-255	Fine control of tilt movement
CH5		Pan/Tilt speed
	000-255	Pan/Tilt speed, decreasing
CH6		Strobe
	000-003	Closed
	004-127	Pulse strobe, slow - fast
	128-191	Fade strobe, slow - fast
	192-255	Random strobe, slow - fast
CH7		Dimmer
	000-255	0-100% dimmer
CH8		Color wheel
	000-005	Open/hole
		Color
	006-011	Color 1
	012-017	Color 2
	018-023	Color 3
	024-028	Color 4
	029-034	Color 5
	035-040	Color 6
	041-046	Color 7
	047-051	Color 8
	052-057	Color 9
	058-063	Color 10
		Half color
	064-069	Color1+white
	070-075	Color1+color2
	076-080	Color2+color3
	081-086	Color3+color4
	087-092	Color4+color5
	093-098	Color5+color6
	099-103	Color6+color7
	104-109	Color7+color8
	110-115	Color8+color9
	116-121	Color9+color10
	122-127	Color10+open
	128-191	Backwards rainbow effect slow to fast
	192-255	Forwards rainbow effect slow to fast
CH9		6 colors color wheel
	000-127	No function
	128-255	6 colors color effect
CH10		Gobo Wheel
	000-009	Open/hole
	010-018	Gobo 1
	019-027	Gobo 2
	028-036	Gobo 3
	037-045	Gobo 4
	046-054	Gobo 5
	055-063	Gobo 6
	064-072	Gobo 7
	073-081	Gobo 8
082-090	Gobo 9	

	091-099	Gobo 10
	100-108	Gobo 11
	109-117	Gobo 12
	118-127	Gobo 13
	128-191	Backwards rainbow effect slow to fast
	192-255	Forwards rainbow effect slow to fast
		Gobo shake
CH11	000-191	Shaking gobos from slow to fast
	192-255	No function
		Prism
CH12	000-127	Open position (hole)
	0128-255	Prism effect
		Prism rotation and indexing
CH13	000-127	Prism indexing
	128-190	Backwards rotation from slow to fast
	191-192	Stop
	193-255	Forwards rotation from fast to slow
		Frost
CH14	000-127	No function
	128-255	Frost effect
		Focus
CH15	000-255	Focus
		Reset
CH16	000-127	No function
	128-255	Reset(in 3sec)

Fixture Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses and mirror should be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

To clean the fixture:

1. Disconnect the fixture from power and allow it to cool for at least 10 minutes.
2. Vacuum or gently blow away dust and loose particles from the outside of the fixture with low-pressure compressed air.
3. Clean the surfaces by wiping gently with a soft, clean lint-free cloth moistened with a weak detergent solution. Do not rub glass surfaces hard: lift particles off with a soft repeated press. Dry with a soft, clean, lint-free cloth or low-pressure compressed air. Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water.
4. Check that the fixture is dry before reapplying power.

Fuse Replacement

This fuse is located in a fuseholder next to the MAINS OUT socket on the connections panel.

To replace a fuse:

1. Disconnect the fixture from power and allow it to cool for at least 10 minutes.
2. Unscrew the cap of the fuseholder and remove the fuse. Replace with a fuse of the same size and rating only.
3. Reinstall the fuseholder cap before reapplying power.

Troubleshooting

Listed below are a few common problems that you may encounter, with solutions.

The fixture does not work, no light

- Check the connection of power and main fuse. Be sure the external fuse has not blown.
- Measure the mains voltage on the main connector.

No response to the sound

- Make sure the fixture does not receive DMX signal.
- Low frequencies (bass) should cause the unit to react to sound. Tapping on the microphone, quiet or high pitched sounds may not activate the unit.
- Check the sound sensitivity level. Make sure it is not set to a low sensitivity level.

Specifications

Model	Hero 300 Super Beam
Power supply:	AC100-240V, 50/60Hz
Light source:	80W white LED
Color temperature:	6600K
Pan:	540°
Tilt:	270°
Focus:	2°
Prism:	16 facet circular rotating indexable prism
Frost:	Frost filter
Static Gobo wheel:	13 static gobos+open
Color wheel:	10 colors+open
Effect color wheel:	7-colors color wheel
Power connection:	PowerCON in
Maximum power linking:	8 units
Signal connection:	3-pin XLR in&out(5-pin optional)
DMX channels:	16
Control mode:	DMX, Auto program, Sound, Master-slave
Housing:	Colour black, Plastic
Size:	323 x 269 x 468mm(12.7 x 10.6 x 18.4in)
N.W.:	12.6kg(28lb)
Environment:	IP20

Please note: All information is subject to change without prior notice. 15.05.2019

